




Slide metal covers over extra wide arms L & R.

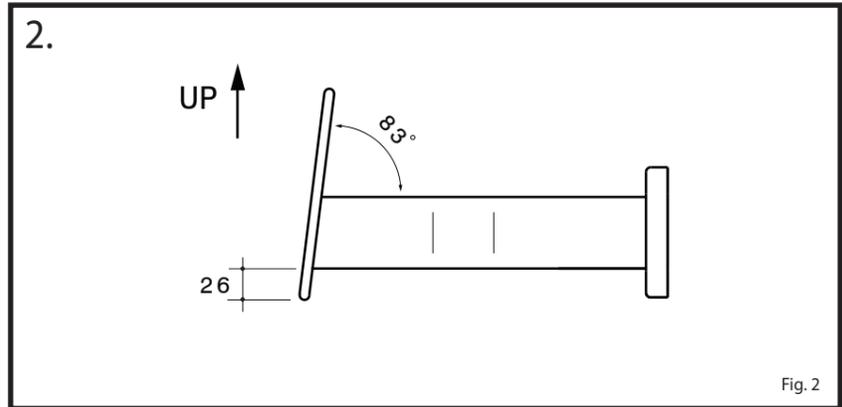


Attach extra wide arms to stainless steel body using 4x Arm fixing bolts. (Fig. 1)
Ensure the angle and the position of stainless steel body is correct as shown (Fig. 2)

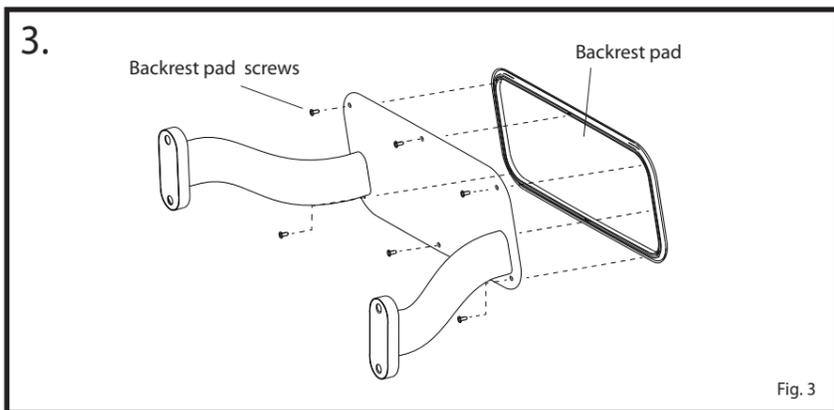

Attach backrest pad using 6 x backrest pad screws as shown in Fig. 3. Ensure all screws are started before tightening. Do not overtighten.

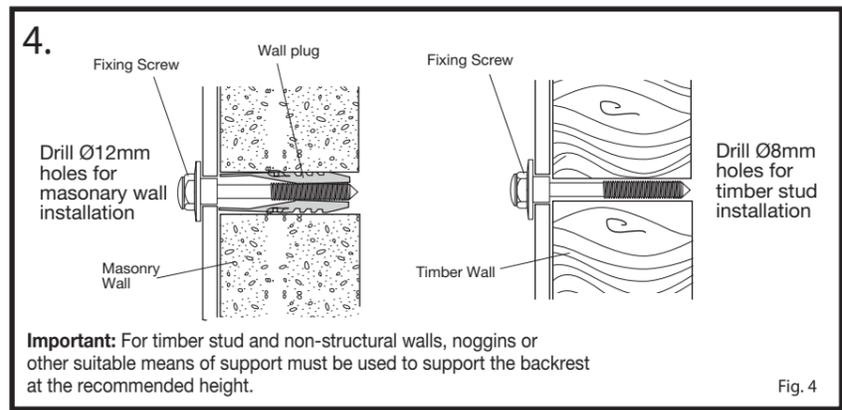

Mark position of fixing holes on finished wall in positions specified in Fig. 6. Ensure correct drill hole sizes is selected for timber or masonry installation as specified in Fig. 4.

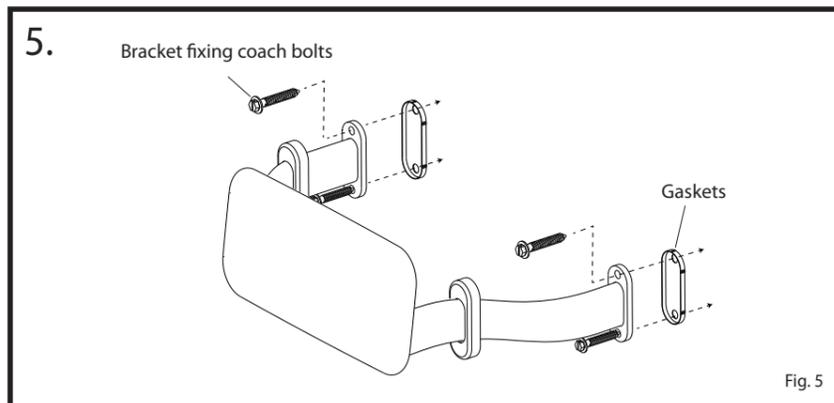

Fit Gaskets onto wall fixing plate as shown in Fig 5.
Attach backrest to wall using 4 supplied Bracket fixing coach bolts

